



# 1720E Quick Reference Card

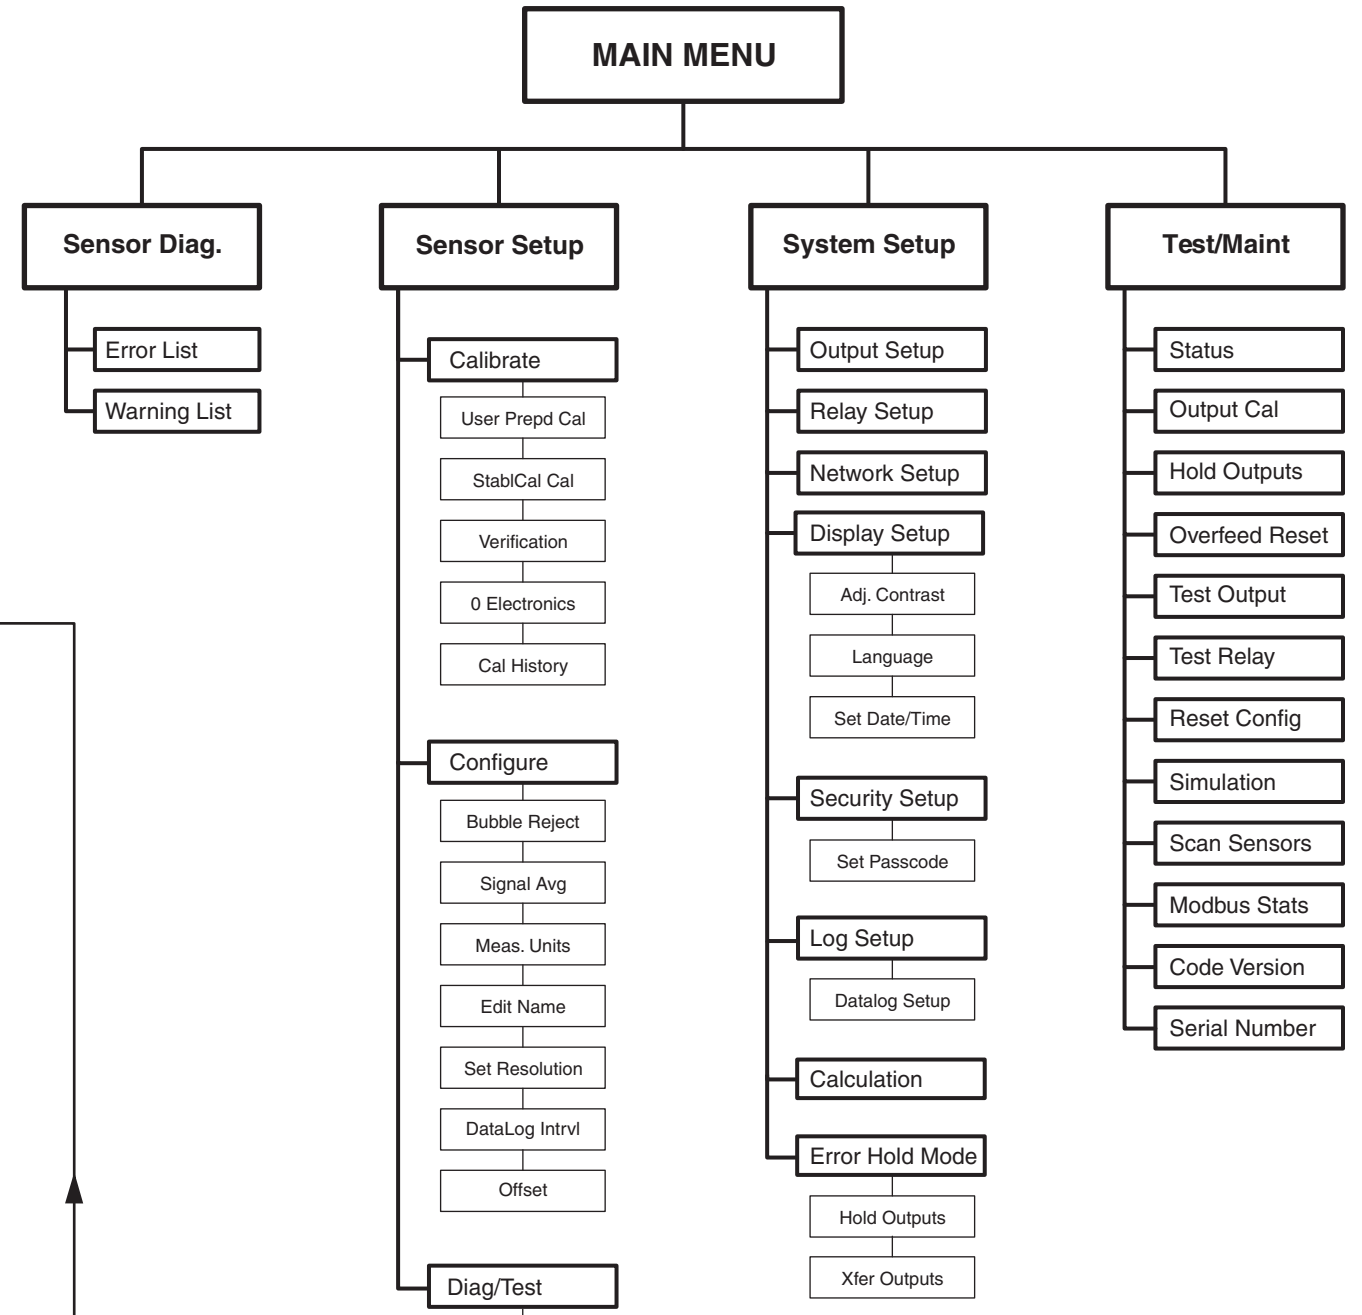

**sc100 Controller Keys**

- Back key moves back one level in the menu structure.
- Menu key moves to the main menu from other menus. This key is not active in menus where a selection or other input must be made.
- Home key moves to the Main Measurement screen from any other screen. This key is not active in menus where a selection or other input must be made.
- Enter key accepts an input value, updates, or accepts displayed menu options.

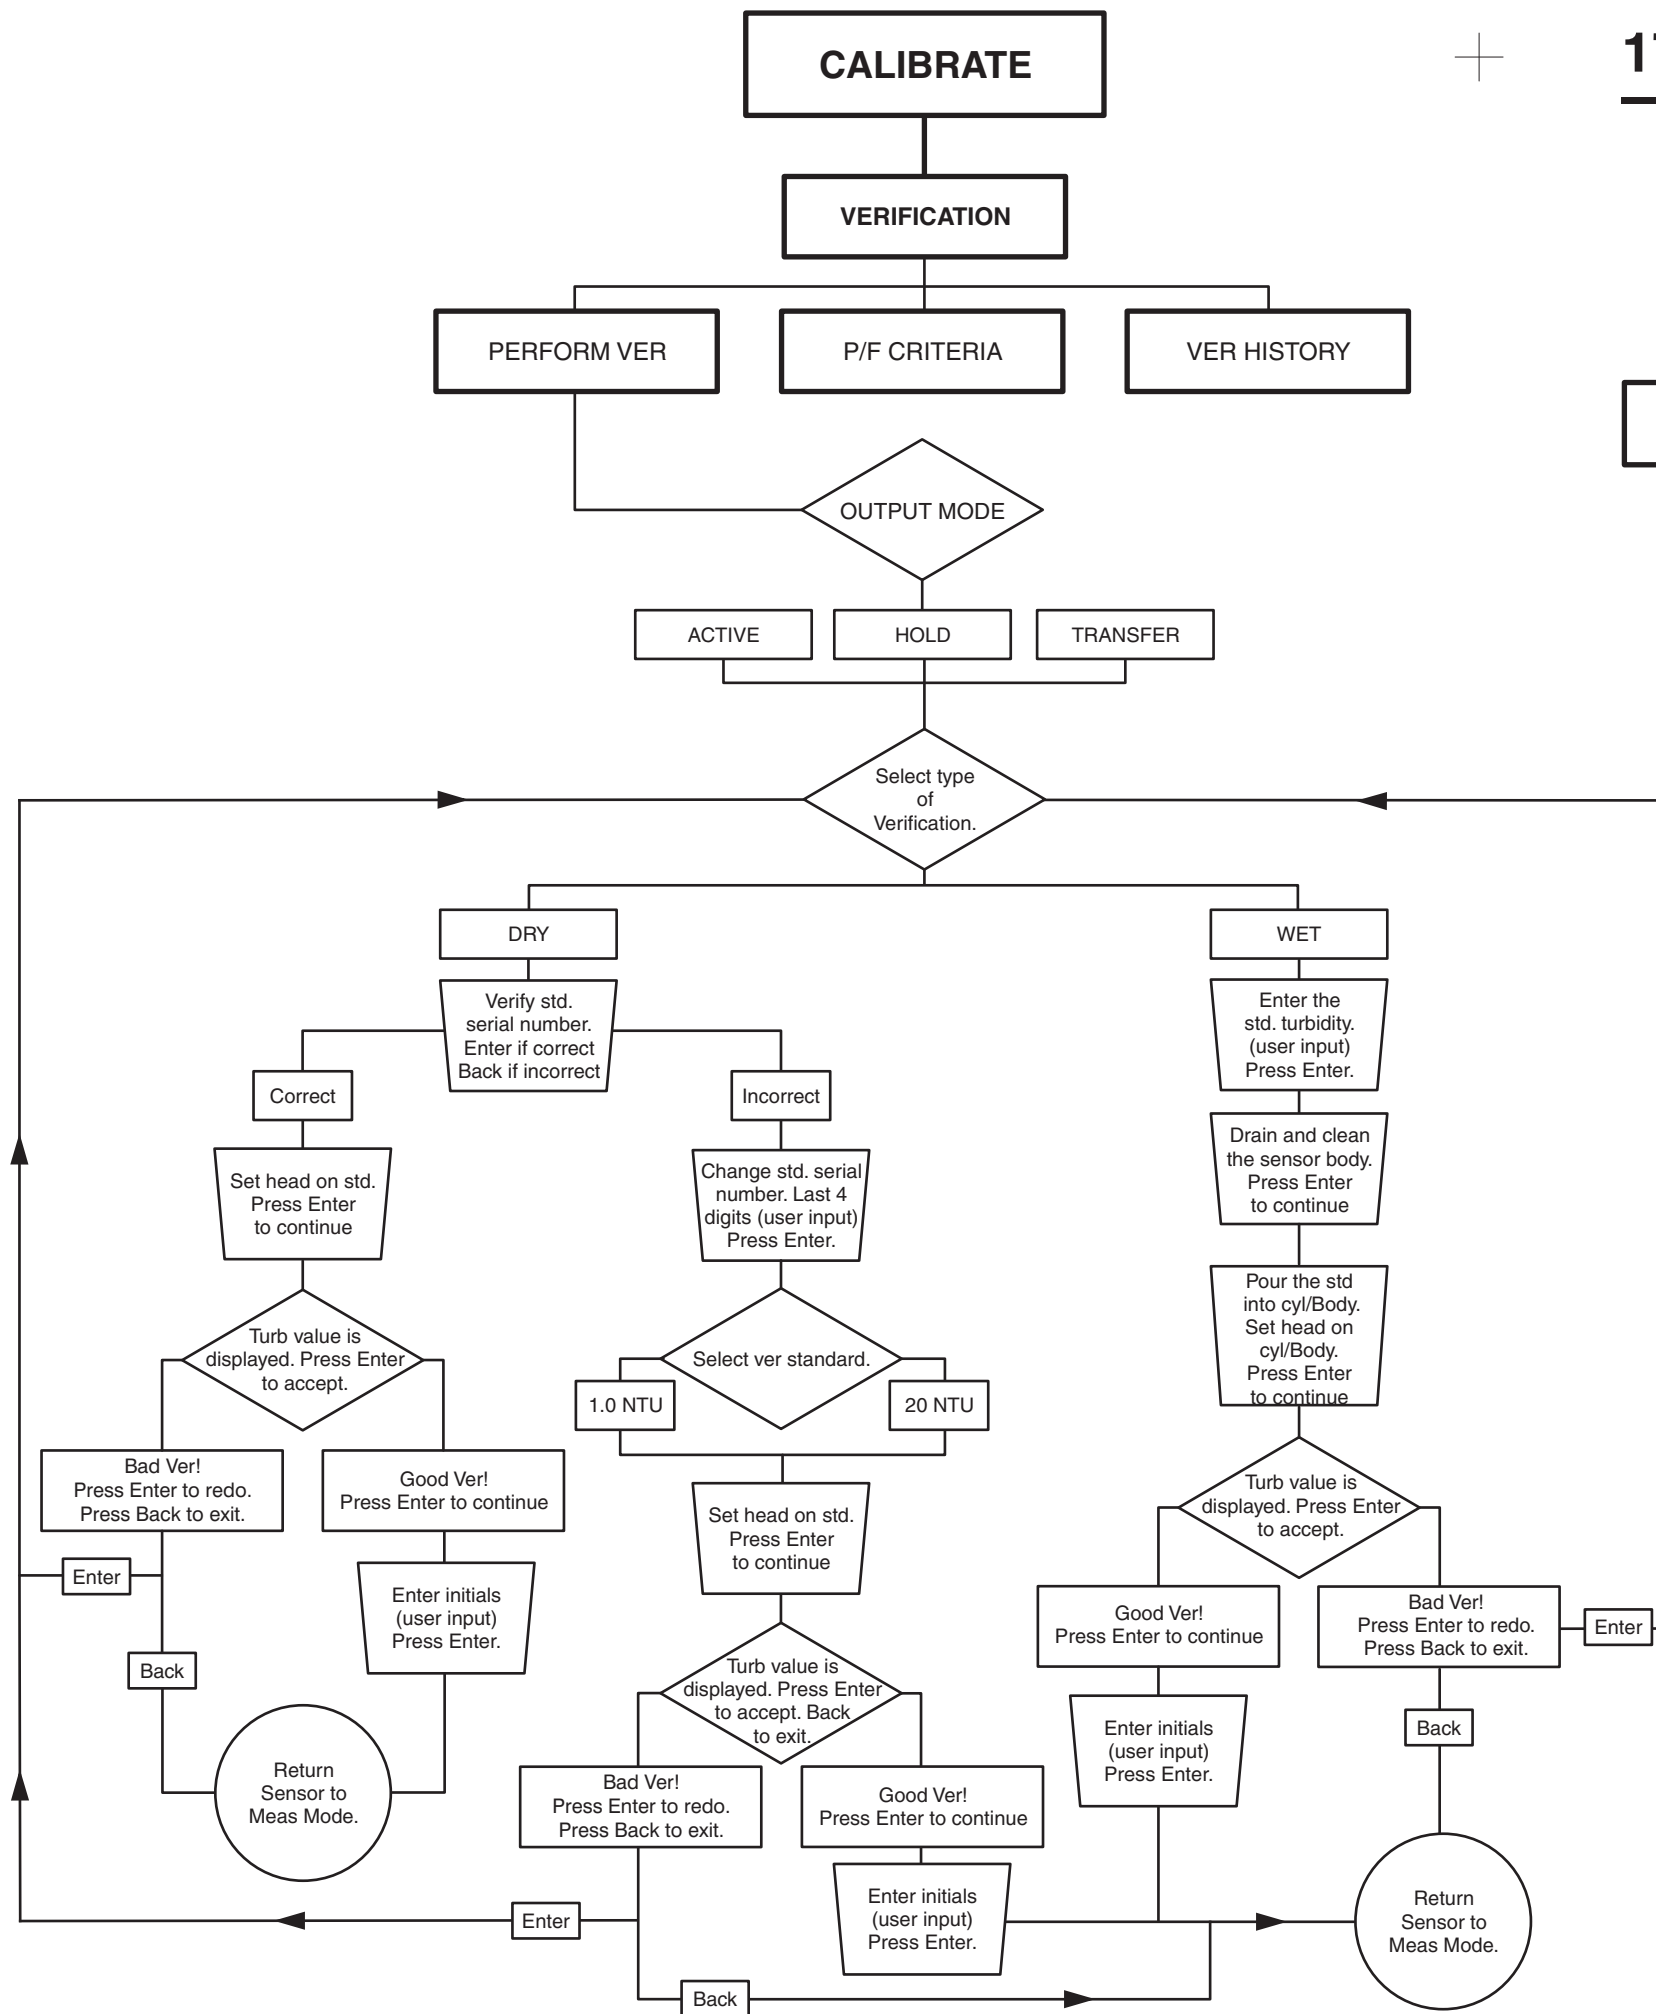